

Meaningful Innovation.

WEEE Number: 80133970

INSTRUCTION MANUAL

LED FLOOD LIGHT

TECHNICAL DATA

MODEL	VT-44104
SKU	23440, 23441 23442, 23443
POWER	100 W
LUMENS	8700 Lm
EFFICIENCY	100+ Lm/w
DF	>0.9
CRI	>70
LIFE SPAN	25,000 Hours
ON/OFF CYCLE	15,000 Times
BEAM ANGLE	115°
COLOUR TEMPERATURE	6500K
INPUT VOLTAGE	AC: 220-240V, 50Hz
OPERATION TEMPERATURE	-20°C to +40°C
NET WEIGHT	0.97 Kg
BODY TYPE	Aluminium
MAX. MOUNTING HEIGHT	<5M













PROJECTED AREA (mm²)	61473.75
DIMENSION	253.5x242.5x40 mm

^{*}This product contains a light source of energy efficiency class<D>,where <D> shall be replaced by the energy class of the contained light source.

INTRODUCTION & WARRANTY

Thank you for selecting and buying V-TAC product. V-TAC will serve you the best. Please read these instructions carefully before starting the installation and keep this manual handy for future reference. If you have any another query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best. The warranty is valid for 5 years from the date of purchase. The warranty does not apply to damage caused by incorrect installation or abnormal wear and tear. The company gives no warranty against damage to any surface due to incorrect removal and installation of the product. The products are suitable for 10-12 Hours Daily operation. Usage of product for 24 Hours a day would void the warranty. This product is warranted for manufacturing defects only.



MULTI-LANGUAGE MANUAL QR CODE


Please scan the QR code toaccess the manual in multiple languages.



Points de collecte sur www.quefairedemesdechets.fr Privilégiez la réparation ou le don de votre appareil!

WARNING

- 1. Please make sure to turn off the power before starting the installation.
- 2. Installation must be performed by a qualified electrician.
- 3. The light source of this luminaire is not replaceable, when the light source reaches its end of life the whole luminaire should be replaced.
- 4. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- 5. Replace any cracked protective shield.
- 6. Terminal block not included.
- 7. Proper grounding should be ensured throughout the installation.
- 8. Minimum distance from lighted objects lm. q---1M
- 9. Limitation of use indoors and outdoor.

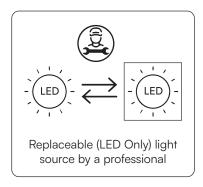

NOTE: To reduce the risk of strangulation the flexible wiring connected to this luminaire shall be effectively fixed to the wall if the wiring is within arm's reach.




This marking indicates that this product should not be disposed of with other household wastes.





Caution, risk of electric shock.


INSTALLATION DIAGRAM

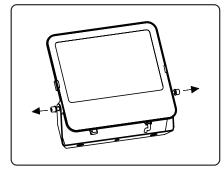



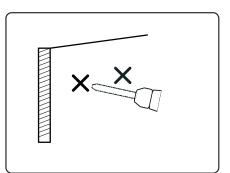

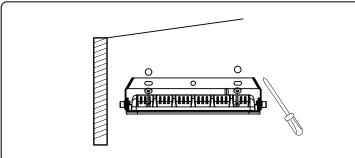

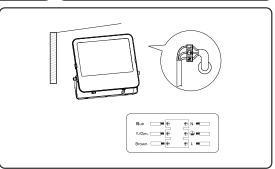

INSTALLATION INSTRUCTION

- DO NOT USE IN AREAS WITH LIMITED VENTILATION OR OUTSIDE THE RATED AMBIENT TEM-PERATURE RANGE. *CON- NECT WITH WATERPROOF CABLE HOUSE ONLY. *ENSURE ELEC-TRICITY IS SWITCH OFF BEFORE INSTALLATION.
- Please do not mount to a surface that is prone to vibrations.*
 Remove the screw and the bracket afterward. (Figure 1)Before drilling, mark the hole position for fixing the bracket onto the wall (Screw not supplied). (Figure 2)
- Screw the retaining bracket to the wall with a suitable quantity of screws. (Figure 4)
- Mount the bracket back to the fixture. Adjust the floodlight according to the desired position.
 Tighten the screw. (Figure 5) Connect your main cable (HO5RN-F3G1.0mm2 Recommended)
 with the input lead of our product through the waterproof junction box. Note, the line (-) of the
 lead. (Need to use the junction box of IP65 or above, ensure to tighten the waterproof screw)
 Switch on the power to make sure if the product is working.

DISASSEMBLY DIAGRAM

For Market surveillance team only

